


SHARP (ES-GE45P-C)

Control Panel

When the lamp or the indicator blinks rapidly, it shows an error or notice.



Control Panel/ Display

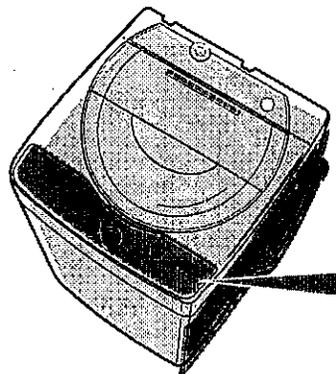

Select button
used to select the individual operation.

	Wash+Spin	Spin	Wash	Wash+Spin	Wash+Rinse	Rinse+Spin	None
洗い : Wash	●	●	●	●	●	●	●
すすぎ : Rinse	●	●	●	●	●	●	●
脱水 : Spin	●	●	●	●	●	●	●

Amount of the detergent
shown by the number of level cup of 4.7g

Start/Pause button
Also used to release the lid lock status.

Lid lock indicator
Turns on while the lid is locked.


About lid lock

- The machine automatically locks the lid while spinning and blow-drying.

Locking time is 10 minutes (lid locked)

➔ You can open the lid about 90 seconds later.
(when in locked)

Power button
The power is turned off automatically when the machine finished operation.
When the machine is left with the power on, it automatically turns off 5 minutes later. (Auto-Power-Off)

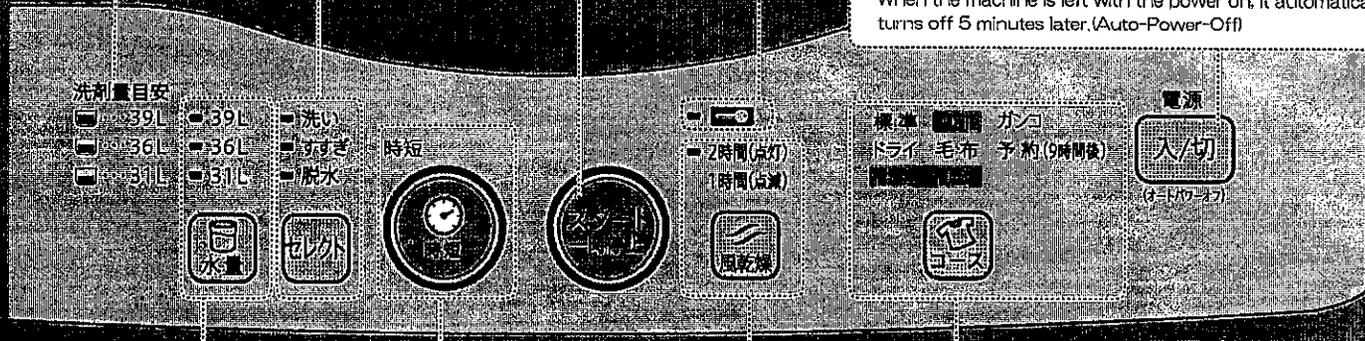

Water level button
The water level is determined automatically.
● You can also change the level as you like.

Quick course button
時短 : Quick

Blow dry button

➔ 全時間 (点灯) : 2 hours (lights up)
1時間 (点滅)

➔ 全時間 (点灯) : 1 hour (blinks)
1時間 (点滅)

Course button

標準 : Normal すすぎ : Rinse once ガンコ : Powerful
ドライ : Delicate 毛布 : Blanket 予約 (9時間後) : Timer
洗濯槽 : Tub clean 洗濯槽 : Tub dry

Introduction of course

How to use each course and its operation

Course	Max. washing capacity	Automatic operation				Operating time ^{*1}	Water level	Blow dry
		Wash	Rinse	Spin	Blow dry			
Normal (Used to wash normally)	4.5kg	15-18 min.	Rinse twice soak rinsing	8 min.	-	About 41-45 min.	31L 36L 39L	○
Timer (Used to finish washing 9 hours later)		12-16 min.		6 min.		About 36-41 min.		
Rinse once (Used to wash using the Ultra-concentrated liquid detergent)		15-18 min.	Rinse once soak rinsing ^{*2}	8 min.		About 36-39 min.		
		12-16 min.		6 min.		About 31-35 min.		
Powerful (Used to wash bulky or dirty clothes)	4.5kg	17-19 min.	Rinse twice flow rinsing	8 min.	-	About 51-53 min.	31L 36L 39L	○
		14-17 min.		6 min.		About 46-49 min.		
Delicate (Used to wash delicate clothes)	1.2kg	10 min.	Rinse twice soak rinsing	35 ⁺ seconds softly	-	About 28 min.	36L ^{*3}	-
Blanket (Used to wash blanket)	2.6kg	17 min.	Rinse twice flow rinsing	9 min.	-	About 53 min.	39L ^{*3}	-
Tub clean/dry (Used when you did the tub dirty or smell bad)	-	6 hours	Rinse twice flow rinsing	2 min.	30 min.	About 7 hours	39L ^{*3}	○
Quick (Used to wash slightly soiled clothes every day)	4.5kg	6-7 min.	Rinse once soak rinsing	8 min. 6 min.	-	About 25-30 min. About 23-28 min.	31L 36L 39L	-

*1 with the standard water supply time (15L/min) and drain time included. The time may be changed depending on the water supply/drain condition and the use of Ag+ion.

*2 The rinse time will be about 6 minutes shorter and the water capacity will be about 35L less than when in the standard course.

*3 The water capacity is fixed. You can change it if you like (The water level is not checked)



Blows off the water of the cloths by rotating the washing tub rapidly and taking the air in from the air inlet on the top lid.

It is used to shorten the time to dry the clothes (with capacity of 2.2 kg or less) or to dry the polyester clothes (with capacity of 1 kg or less).


Error indication

When the trouble is not solved, please call for the service.

Display · Contents	Check point	After solving the trouble To restart
<p>Water is not supplied.</p>	<ul style="list-style-type: none"> Did you open the water tap? Are there any problems that stopped the supply of water? Has the filter of the water supply valve been clogged? 	Press Start
<p>Water supply does not stop.</p>	<ul style="list-style-type: none"> Check if position of the water drain hose is not too high. <ol style="list-style-type: none"> Turn off the power, make the drain hose horizontal (no higher than 10 cm) Turn off the power, turn on the power, drain the water, and start operation again. 	
<p>The top lid is open.</p>	<ul style="list-style-type: none"> Is the lid closed completely? 	
<p>The machine cannot drain the water.</p>	<ul style="list-style-type: none"> Is the drain hose crashed or too long? Is the drain position too high or the end of the hose clogged? Is the extension hose too long? Is the drain outlet clogged? 	Press Start
<p>The machine cannot spin.</p>	<ul style="list-style-type: none"> Is the machine inclined or rattled? Is the laundry goes out of the tub? Is the laundry leant to one side? (Jeans or thick clothes tend to be leant) <p>The vibration is so big that the stop switch is activated. → rearrange the laundry uniformly after the tub stops completely.</p>	Close the lid. The operation is resumed about 10 seconds later (or about 1 minute later depending on the remained water amount).
<p>The drain is not locked/unlocked.</p>	<ul style="list-style-type: none"> The drain condition may be bad, too much detergent may be put in, etc. 	Press Start
<p>The lid is not locked/unlocked.</p>	<ul style="list-style-type: none"> Is anything (such as cloth) jammed at the lock position of the lid? 	Close the lid and press Start.
<p>The machine might be out of order.</p>	<ul style="list-style-type: none"> Turn off the power, and turn it on again about 1 minute later. If the same indication continues, pull out the power plug and ask for repair immediately. 	

How to Operate Washing normal laundry

Normal/Rinse once/Powerful course

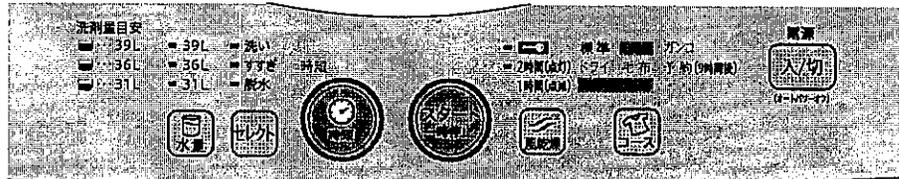

Display example when in the normal course

Preparation

Open the water tap.



Put the laundry into the tub



<Power button>

▶ 標準 ◀
<Normal>

Set to the normal course automatically.

To get other course than normal

<Course button>

To get to wash to blow-dry continuously

- Possible in the normal, rinse once or powerful course

<wash>
<rinse>
<spin>

<Blow-dry button> <Select button>

Push the Blow-dry button, and then push the Select button until all the "wash", "rinse" and "spin" indicators light up.

2



<Start/ Pause button>

Start supplying water.



3


Put in the detergent.

Softener
Put in the softener inlet.

Powder detergent/
liquid detergent/
powder bleach
Put directly in the tub

• Put the amount specified by the indicator


• When operating in the rinse once course, be sure to use the detergent which recommends to rinse once

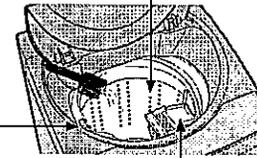

Liquid bleach
Put in the liquid detergent/
liquid bleach inlet

4

Close the top lid.

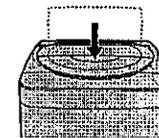

Operation

Take the laundry out of the tub.



Amount of the detergent/softener

Amount of water/detergent displayed on the machine	Amount of laundry	Synthetic detergent				Soap powder	Softener			
		Powder type		Liquid type			7g softener for 30L water	10g softener for 30L water	20g softener for 30L water	
39L	4.5kg	26g	32g	13mL	26mL	32mL	47g	9mL	13mL	26mL
36L	2.5kg	24g	30g	12mL	24mL	30mL	43g	8mL	12mL	24mL
31L	1.5kg	21g	26g	10mL	21mL	26mL	37g	7mL	10mL	21mL