


<NE-T157>

Door

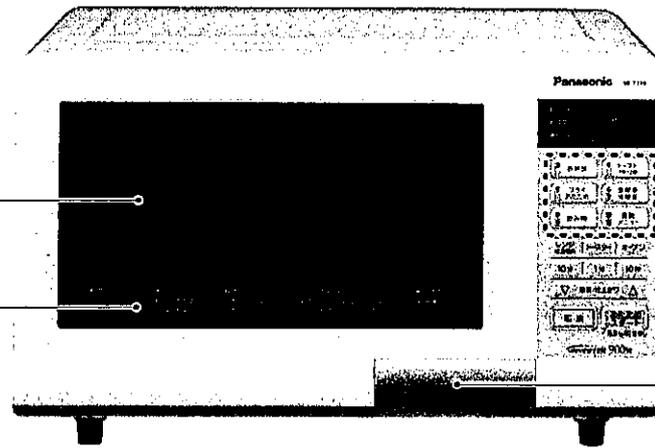

Operation panel

Door grip

Pull it toward you, and the door will open.

Door panel Shows Auto cook number and dish name

■ 飲み物

- 8 牛乳・コーヒー
- 9 酒かん

■ 自動メニュー

- 10 ゆで葉果菜
- 11 ゆで根菜

簡単スープごはん

- 12 きのことしょうが
- 13 キムチクッパ

焼き物・揚げ物メニュー

- 14 塩ざば
- 15 からあげ
- 16 なすのグラタン
- 17 ひとつちカツレツ

■ お手入れ

- 18 脱臭

■ Drinks

- 8. Milk, coffee
- 9. Sake

■ Auto cook

- 10. Boiled leafy vegetables
- 11. Boiled root vegetables

■ Easy-to-cook soup with rice

- 12. Mushrooms and ginger
- 13. Kimchi gukba

■ Grill/Fry

- 14. Salted mackerel
- 15. Fried chicken
- 16. Eggplant gratin
- 17. Fried meat

■ Maintenance

- 18. Deodorize

Operation panel

* "M" indicates shop display mode. Cooking is not possible in this mode.
【How to reset the mode】


- ① Push the **レンジ** "Microwave" button, then push the **1 あたため・スタート**
- ② "[1] Heat/Start" button four times. If the **取消** "Cancel" button is then pushed four times, "M" will disappear from the display and the mode will be cancelled.
- ③ Press the **取消** "Cancel" button four times.

Temperature/Finish adjust button

This button is used to set the temperature for oven cooking. When reheating by pressing the **1 あたため・スタート** "[1] Heat/Start" button directly or this is also used in adjusting the cooking strength for "Heat" or for the automatic menu.

Cancel button

- This button is used when you want to stop cooking midway through or when a wrong button has been pressed.
- When you check the cooking progress, open the door instead of pressing the **取消** "Cancel" button. Press the **1 あたため・スタート** "[1] Heat/Start" button again.
 - You can mute the beeps.

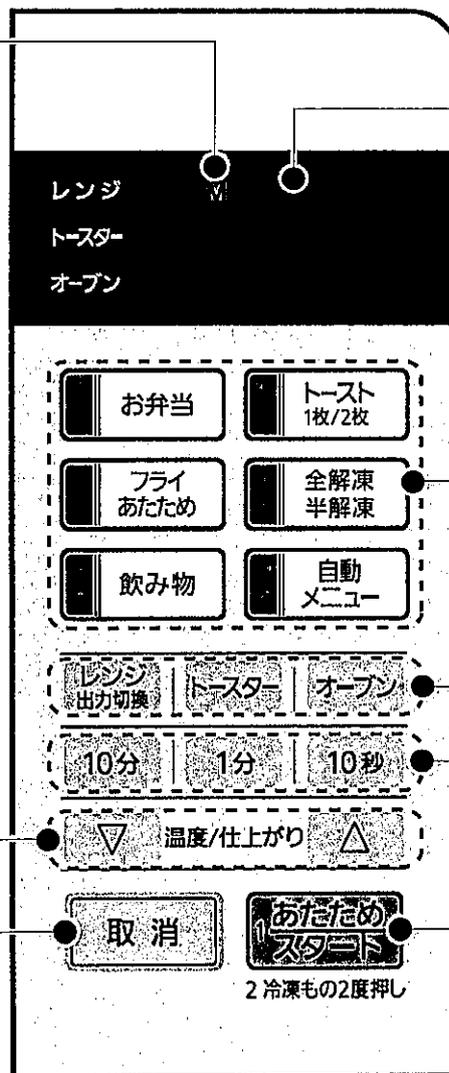

Display panel

Auto cook button

This button requires no time or temperature setting. The **4 トースト 1枚/2枚** "[4] 1/2 slices of toast" button sets the number of slices.

Manual cook button

(**レンジ** Microwave button)
(**トースター** Toaster button)
(**オープン** Oven button)
This function requires time or temperature setting depending on the state of the food or the desired finish.

Timer button

This button is used to set the heating time for manual cooking. Press this button several times to reset "Minutes" and "Seconds" to "0".

Heat/Start button

- Use this button to heat rice or side dishes.
- Use this button to start cooking in a mode other than "Heat".