

# Function of operation panel: NW-7SY/6SY

■The operation panel is described with NW-7SY.

## Selects the drying time

When the "AIR DRYING (風乾燥)" button is pressed, the drying time will be lit in sequence.

## Using convenience button

When the "CONVENIENCE (便利)" button is pressed, the delayed time (予約), indoor dry (部屋干し), Tub cleaning (槽洗浄) will be lit in sequence.

## Selecting "WASH" course

When the "WASH (洗濯)" button is pressed, the courses which can be selected will be lit in sequence.

## START/PAUSE

Used to start or pause the operation.

- Even if "START/PAUSE (スタート/一時停止)" is pressed during operation, the lid cannot be opened until the wash and spin tub stops rotating.


## Alert displays

- (Lid lock)
- The lamp remains while the lid is locked.

## Power switch

Used to turn the power ON/OFF.

- When the operation is complete, the power will automatically turn off.
- If the unit is left as is (not started), power will automatically turn off after 5 minutes.

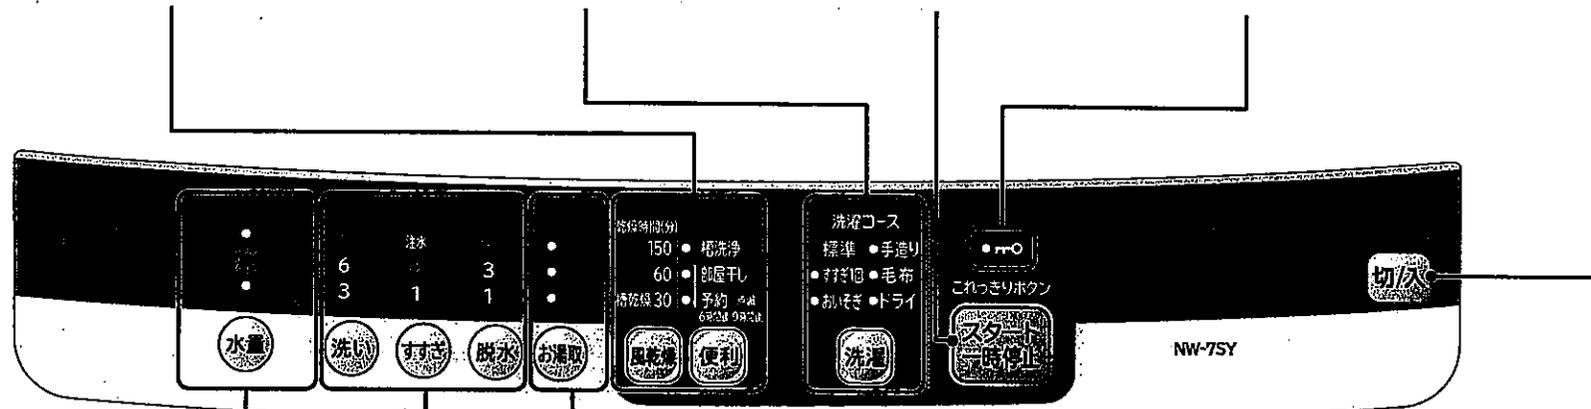

※Operation panel is a "NORMAL" course (water level 35L) example.

## Water level and detergent amount indication

The water level can be set to match your preference.

- If you want to add water during washing and rinsing, press the "WATER LEVEL (水量)" button. Water is supplied while the button is being pressed; (Water is not supplied above the maximum water level of each course.)

## Changing operation contents

The contents and combination of "WASH (洗)", "RINSE (すすぎ)", and "SPIN (脱水)" are switched.

- To change the setting after starting the operation, press "START/PAUSE (スタート/一時停止)" button. Once the washing cycle is finished, no setting can be performed.
- Each button cannot be changed between the start of water supply and reaching of the set water level.
- Settings of some courses cannot be changed.

## Using bath water

By pressing "WATER PUMP (お湯取り)" button, processes in which the bath water is used will be lit in sequence.

- When not using the bath water, press the button to turn off all lamps.
- The "HAND WASH (ドライ)", "AIR DRYING (風乾燥)" and "TUB DRYING (槽乾燥)" courses cannot be set.



## Indications

Settings and processes, etc. are indicated by lighting and blinking of lamps.

- Lights out ..... ○, 3
- Steady light ... ●, 3
- Blinking .....

# Names of parts, accessories: NW-7SY/6SY

N62644-14-P-0091 Form #0001

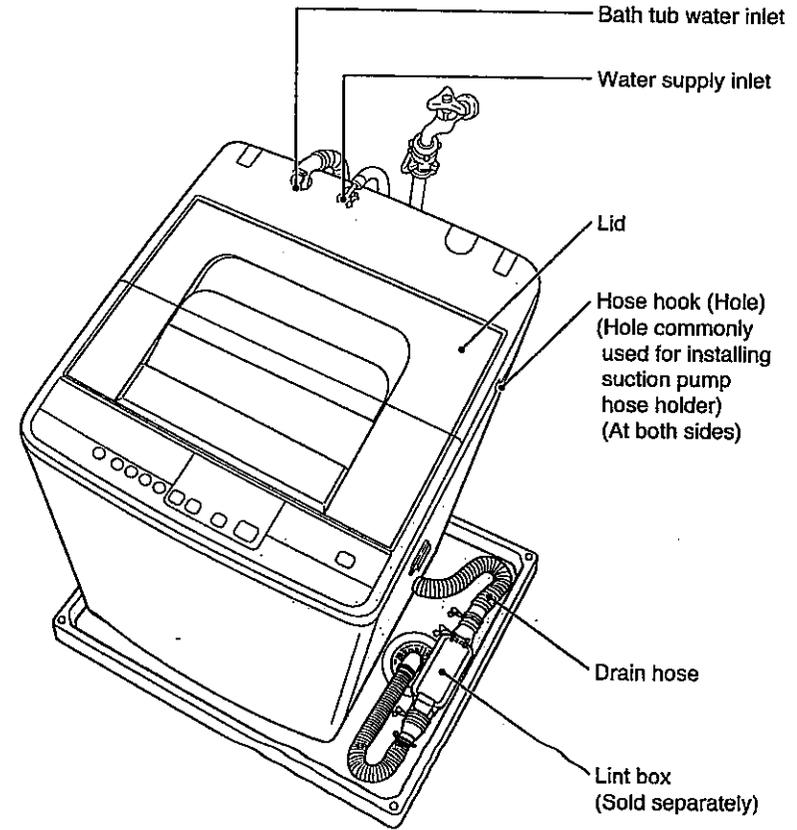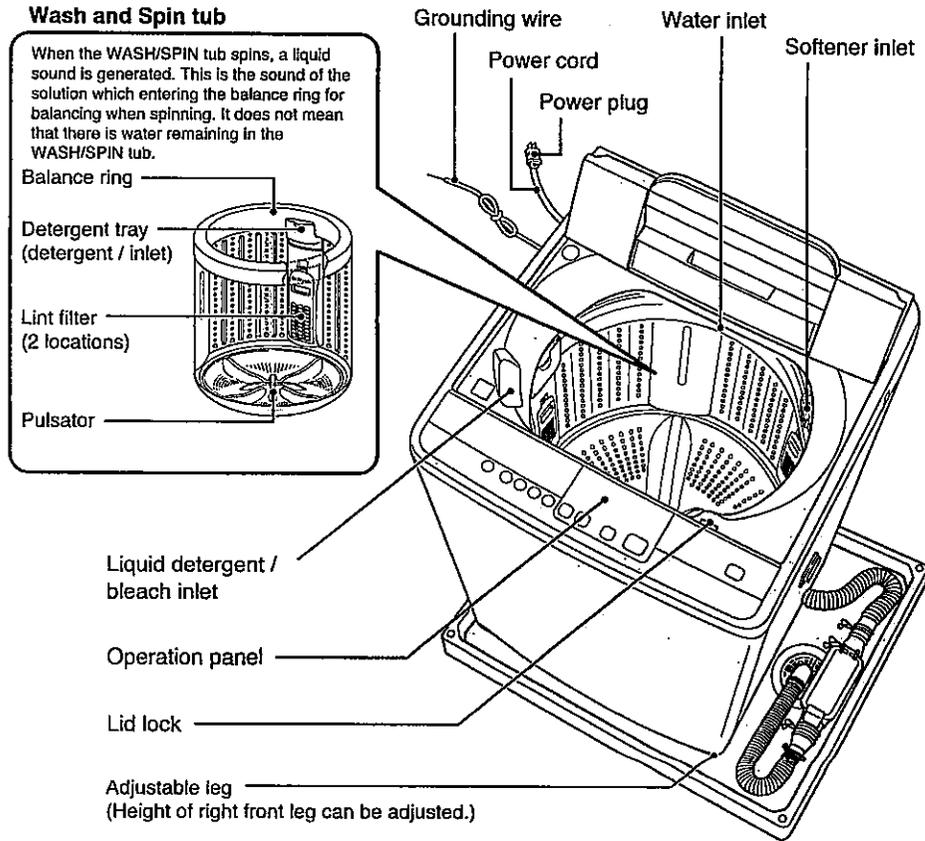

Accessories							
Used when connecting to the water faucet.		Used when using bath tub water.		Used when putting away the suction pump hose.	Used when installing the body horizontally.	Used when checking the body horizontally.	Watch this, before using the machine.
Water supply hose (approx. 0.8 m) : One	One-touch joint : One	Suction pump hose (for bath tub water) (approx. 4 m): One	Water pump unit : One	Suction pump hose holder : One	Leg caps (for adjusting height) : Four 4mm 8mm	Water level : One	DVD How to use skillfully : One

# WASH: NW-7SY/6SY

## Course selection


Laundry type	Course (洗濯)	Maximum washing capacity	Water level (水量)	Bathtub water (お湯取)	DELAYED START 6 HOURS LATER 9 HOURS LATER	INDOOR DRY	Recommended detergent
Normal clothes 	NORMAL (標準)	7kg For 7SY 6kg For 6SY	Can be changed	Can be selected	Can be selected	Can be selected	Powder detergent or liquid detergent
Washing with detergents requiring only one rinse cycle 	SINGLE RINSE (すすぎ 1回)	7kg For 7SY 6kg For 6SY					Detergents requiring only one rinse cycle
Washing moderately dirty clothes in short time 	SPEED (おいそぎ)	3.5kg For 7SY 3kg For 6SY					Detergents requiring only one "SPEED" course
Self programming 	MANUAL (手造り)	7kg For 7SY 6kg For 6SY					Powder detergent or liquid detergent
Blankets, quilts, curtains, bed spreads, etc. 	BLANKET (毛布)	4.2kg					Liquid detergent
Laundry with dry mark 	HAND WASH (ドライ)	1.2kg	Cannot be selected	Cannot be selected	Cannot be selected	Special detergent for clothes with dry cleaning symbol or liquid	

### ATTENTION

#### To prevent injury from abnormal vibration during spin cycle and avoid machine malfunction:

- Do not wash, rinse, spin or dry the following items: Waterproof mattresses/ sheets/clothes, hard or thick materials such as bathroom rugs and doormats, textile products that are impervious to water.
- Do not wash the laundry (large items such as Blankets) while folded and stacked.
- Do not use a laundry net of more than 40cm on a side.
- Because of abnormal vibration during spinning, the laundry may bounce out of the machine and clothes may be damaged as well as harming the wall or floor near the machine.

## How to use

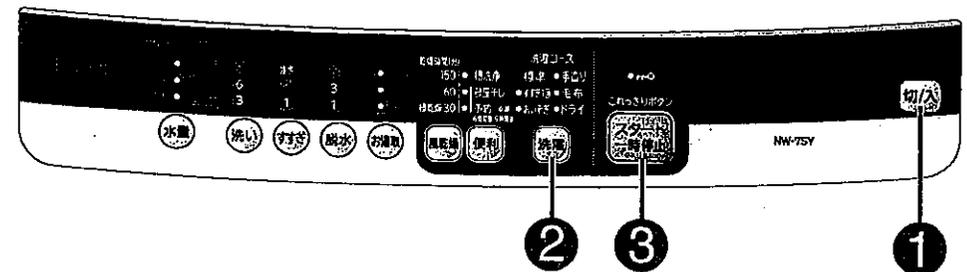

**Preparation** Turn on the water tap, and load the laundry.

**1** Press to turn the power on.

**2** Press and select a course.

- When water pump is used, press to light the desired course lamp.
- When changing settings for "WATER LEVEL", "WASH", "RINSE" and "SPIN", press to light the desired lamp.

**3** Press button.

Weight of laundry will be measured, and the amount of water will be displayed about 16 seconds later.  
Not measured at the "MANUAL(手造り)", "BLANKET(毛布)" and "HAND WASH(ドライ)" courses.



Example of "NORMAL" course (water level 35L)


**4** Insert detergent and bleach and softener according to water level indication and then close the lid.

# Using "CONVENIENCE(便利)" button (DELAYED START(予約)・INDOOR DRY(部屋干し)・TUB CLEANING(槽洗浄) : NW-7SY/6SY

## How to use "CONVENIENCE" button

■ The "DELAYED START(予約)", "INDOOR DRY(部屋干し)" operation and "TUB CLEANING(槽洗浄)" course→(P.6) can be set.

● (便利) The setting changes with each press of the "CONVENIENCE" button.

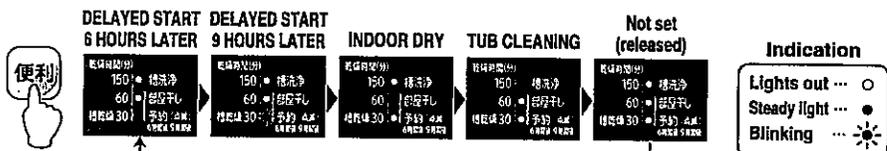

## "DELAYED START"

■ It is convenient, When you want to wash and dry while you are absent and at night.

- The time at which the operation finishes may vary depending on the volume and type of laundry, amount of water, water and air temperature, and drainage conditions.
- Do not wash laundry with items that are likely to bleed color using delayed operations.
- If the power plug is disconnected or a power outage occurs, the delay will be canceled.
- To reduce wrinkles, hang laundry as soon as possible after the operation finishes.
- Remove the laundry as soon as possible after the operation finishes. Leaving the laundry inside after the operation finishes can result in odors.
- Do not add too much laundry after setting the delay time. Doing so may reduce washing results and result in uneven drying.

### After setting the delay

- To check the delay time : Press the "CONVENIENCE" button. (The delay time appears while the button is pressed.)
- To cancel the delay : Press the "POWER SWITCH" button to turn off the power.
- To change the delay time : Press the "POWER SWITCH" button to turn off the power, and start over.
- To add laundry : Add the laundry without turning the power off.

## "INDOOR DRY"

■ After washing, the drying time is shortened by 30 minutes air flow drying. It is not drying that uses the heater. Ends without regard to dryness because of wind type drying.


- There may be insufficient drying and irregular drying depends on the amount and kind of laundry, air temperature and humidity, state of ventilation in the room, season and environment. Irregular drying occurs especially with thick clothing such as 100% cotton. However, this is normal. At such times, perform additional drying or hang the clothes outdoors.

### ⚠ ATTENTION

To prevent injury from abnormal vibration during spin cycle and avoid machine malfunction:

- Do not wash, rinse, spin or dry the following items: Waterproof mattresses/ sheets/clothes, hard or thick materials such as bathroom rugs and doormats, textile products that are impervious to water.
- Do not wash the laundry (large items such as Blankets) while folded and stacked.
- Do not use a laundry net of more than 40cm on a side.
- Because of abnormal vibration during spinning, the laundry may bounce out of the machine and clothes may be damaged as well as harming the wall or floor near the machine.

## How to use

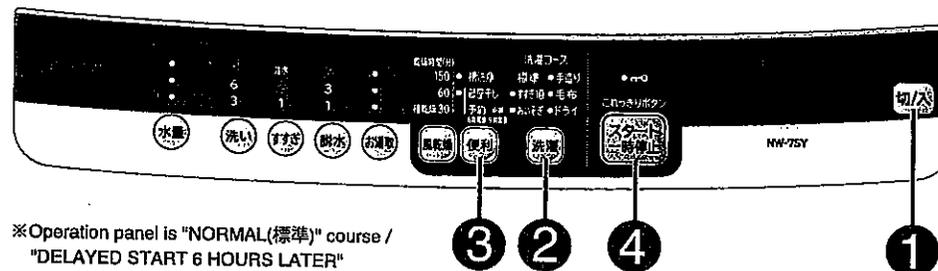

※ Operation panel is "NORMAL(標準)" course / "DELAYED START 6 HOURS LATER"

## "DELAYED START"

Preparation Turn on the water tap, and load the laundry.

1 Press **切/入** to turn the power on.

2 Press **洗濯** and select a course.

The "HAND WASH(ドライ)" course cannot be set.

3 Press **便利** and select the "DELAYED START 6 HOURS LATER (予約6時間後)" or "DELAYED START 9 HOURS LATER(予約9時間後)".

4 Press **槽洗浄** button.

5 Insert detergent and bleach and softener according to water level indication and then close the lid.

The operation settings will appear briefly before disappearing, and only the delay indicator and select course will be displayed.

## "INDOOR DRY"

Preparation Turn on the water tap, and load the laundry.

1 Press **切/入** to turn the power on.

2 Press **洗濯** and select a course.

The "HAND WASH(ドライ)" course cannot be set.

3 Press **便利** and select the "INDOOR DRY(部屋干し)".

4 Press **槽洗浄** button.

5 Insert detergent and bleach and softener according to water level indication and then close the lid.