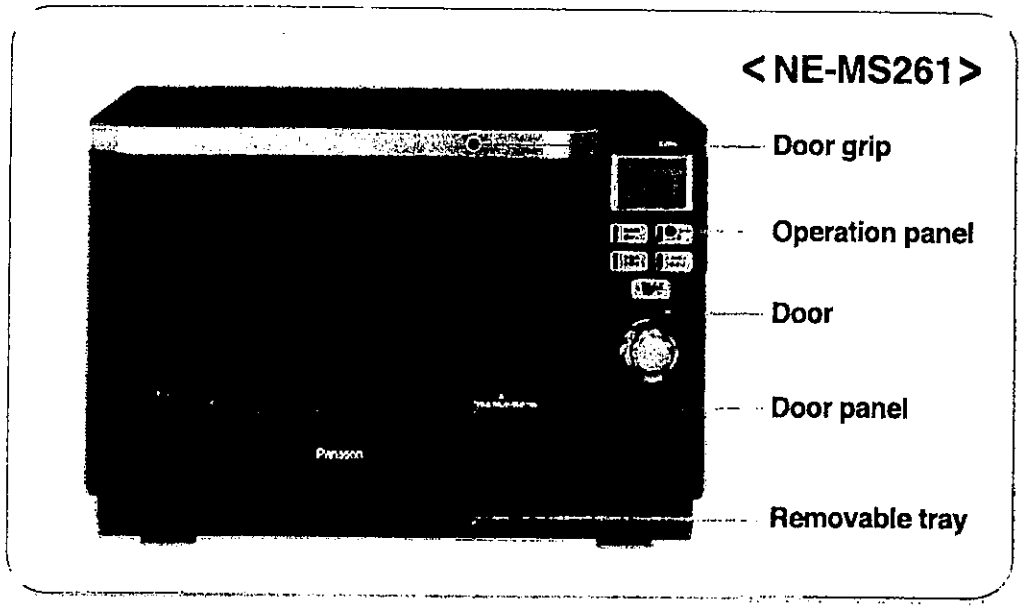

Door Panel

■自動メニュー		■焼き物・揚げ物		■お弁当セット	■角型スチーム	■お菓子・パン
8 お弁当あたため	12 野菜ごうま煮	15 クラタン	19 からあげ	21 チキン	25 茶わん蒸し	29 スポンジケーキ
9 フライあたため	13 ラタトゥイユ	16 鶏肉のロースト	20 ホイル焼き	22 ポーク	26 カトーショコラ	30 チルドピザ
10 ゆで野菜	14 焼きいも	17 肉巻き野菜		23 さけ	27 濃厚チーズケーキ	31 バターロール
11 ゆで根菜		18 一口とんかつ		24 さば	28 とろけるプリン	

自動メニュー/時間

Auto Menu / Time
Turn the dial to select [Auto menu 8-31].
The menu number will be shown on the display panel.

Operation Panel

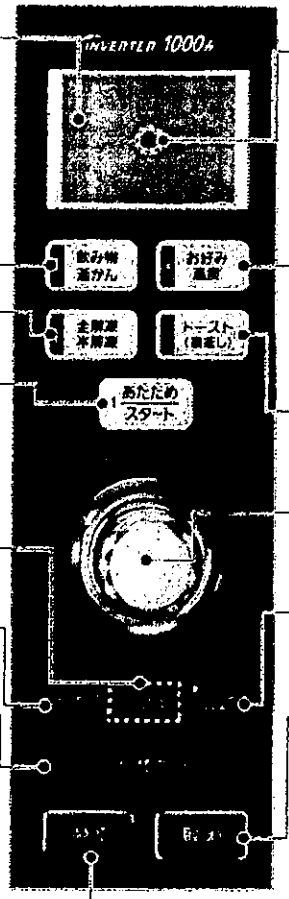

Display Panel
This displays the auto menu numbers, adjust the degree of cooking finish, temperature and time.

Drink / Sake Button

Thaw Fully / Partially Button

Reheat / Start Button
- To start / restart cooking
- "Reheat"
- "Temperature setting"

Grill Button

Microwave Button

Temperature / Finish Adjustment Button
- Use to set your desired temperature
- Use when setting the oven cooking temperature
- Change the degree of cooking finish of an auto menu.

Deodorize Button

When "M" is displayed
It indicates that the unit is in the store display mode and cooking is disabled.
[How to cancel]
1. Press the [レンジ] [Microwave] button.
2. Press the [1あたため・スタート] [Reheat/Start] button four times.
3. Press the [取消] [Cancel] button four times.

Temperature Set Button

Toast Button
You need to turn the bread over while it is toasting.

Auto Menu / Time Dial
- Select auto menus
- Set the time for manual cooking.

Oven / Rise Button
- "Oven"
- "Rising"

Cancel Button
◆Cancel an operation or stop the microwave.
If you wish to check the cooking progress, open the door instead of pressing the cancel button.
When you close the door and press [1あたため・スタート] [Reheat / Start] button, cooking will restart.

Users Guide

When placing the food

▶ Prepare the food

Put the food inside a container and place this on the circle inside the oven

- The square plate attachment may be needed depending on the type of heating being used. (The square plate cannot be used with the microwave function)
- Place dishes at the center using the circle as a guide.

▶ When reheating or defrosting

When the oven is hot, use the manual operation

- When the oven has become hot after heating or during continuous use of the microwave function, the infrared sensor will not work well and may display the "U50" message.
  In such cases, press the [Cancel] button to cook with the manual microwave function.

When setting

Select the Menu

▶ Press [1あたため・スタート] [Reheat/Start] button to start heating immediately.

▶ When you wish to change the temperature or cooking finish after starting

- When heating food by using the [1.Reheat] button or [2.Drink] button you can change the degree of cooking finish by pressing the button while the display setting is flashing (for 14 seconds).

- For auto menus other than [2.Drink] button you can change the degree of cooking finish by pressing the button while the display setting (for 14 seconds).



After heating

▶ When taking the food out

Be Careful not to Burn Yourself

- Always use oven mittens when taking the square plate out, using both hands.
- If a dish has been left inside the oven, the alarm will beep once every two minutes. (over a six-minute period)
- Use a cloth or oven mittens to take out hot dishes after using the reheat function.